




ELECTRICAL REPLACEMENT MANUAL
MANUEL DE REMPLACEMENT ÉLECTRIQUE
MANUAL DE REEMPLAZO ELÉCTRICO

MODEL | MODÈLE | MODELO

17602047 17602048 17602066
17602060 17602061 17602062

ELECTRIC PATIO
BISTRO® 240

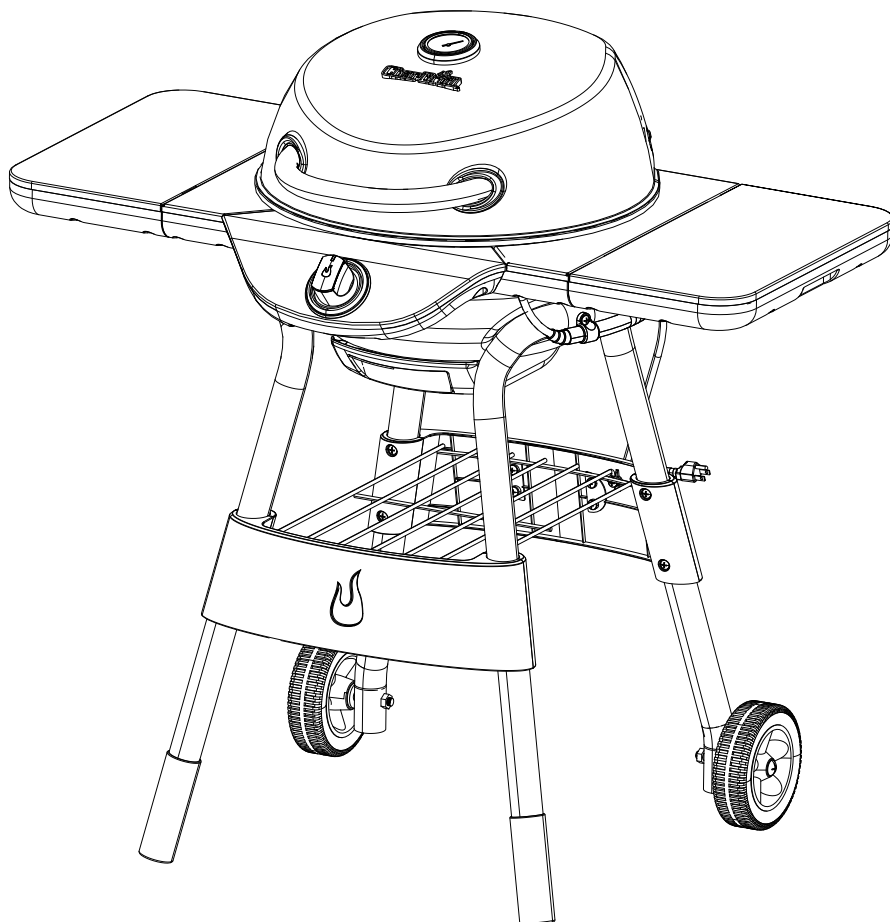

**CONTROLLER ACCESS/ REPLACEMENT
ACCES / REMPLACEMENT DU CONTRÔLEUR
ACCESO / REEMPLAZO DEL CONTROLADOR**

FIGURE 1/ IMAGE 1/ FIGURA 1

Remove/ Replace Warming Rack
Retirer/ remplacer le Grille de chauffage
Retire/ reemplaza la Rejilla de calentamiento

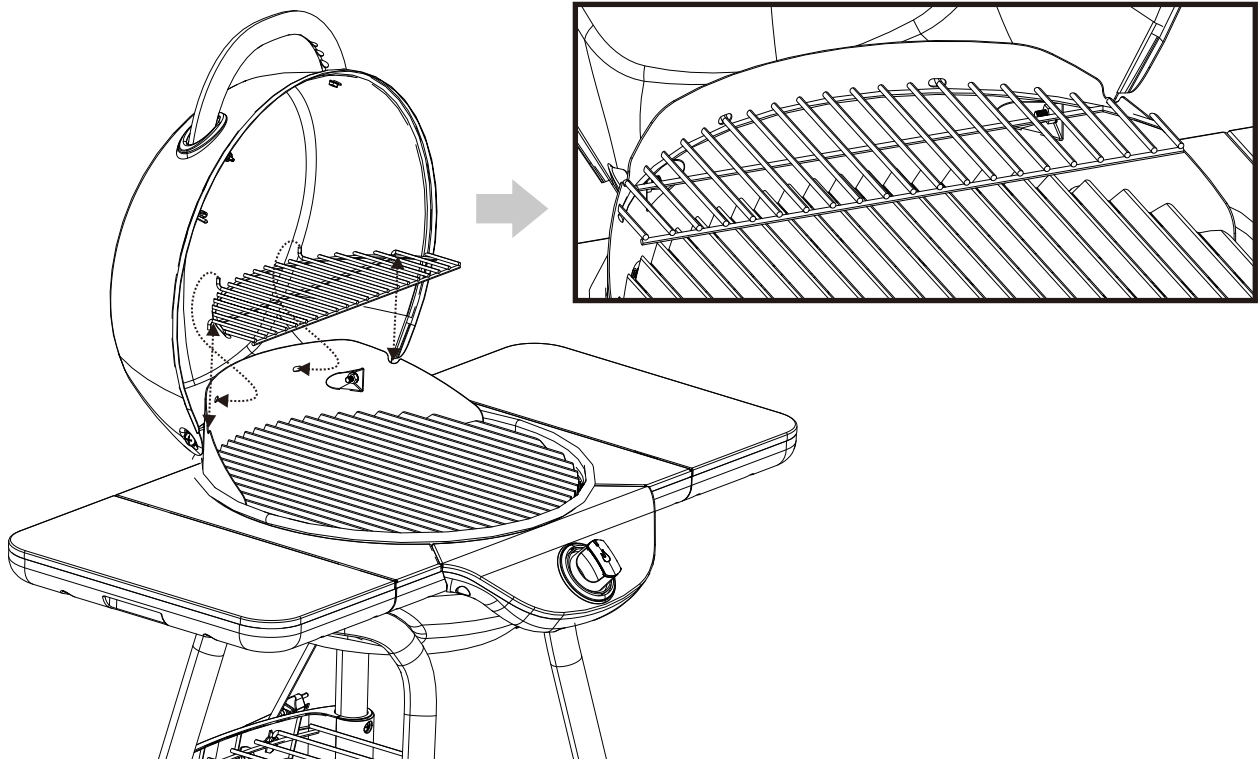


FIGURE 2/ IMAGE 2/ FIGURA 2

Remove/ Replace Cooking Grate
Retirer/ remplacer le Grille de cuisson
Retire/ reemplaza la Rejilla de cocción

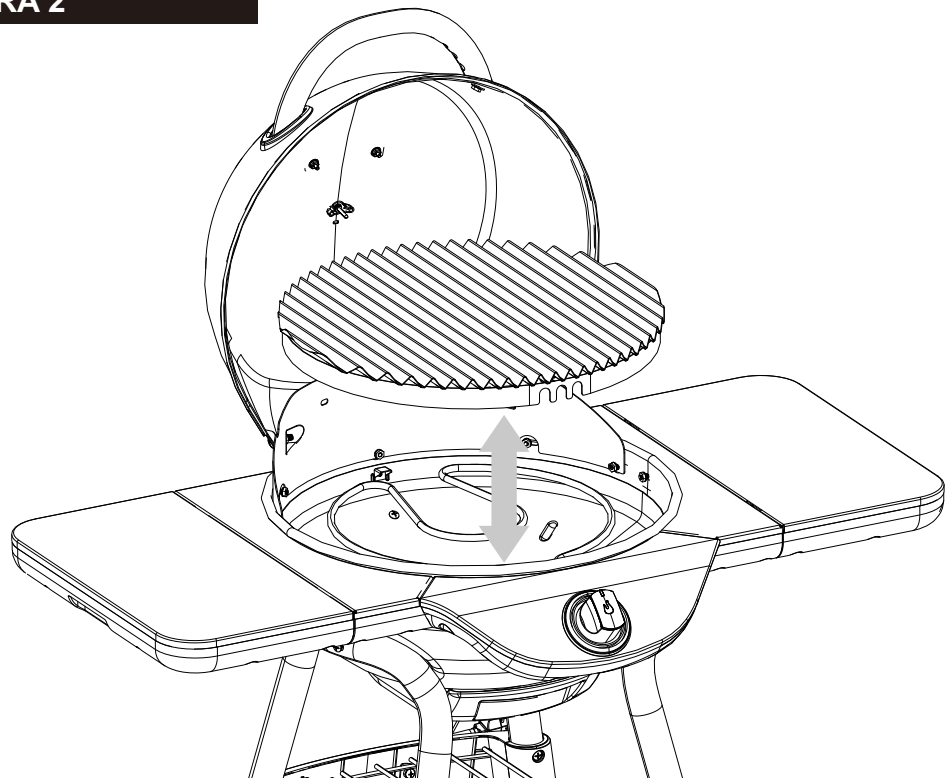


FIGURE 3/ IMAGE 3/ FIGURA 3

Remove/ Replace Grease Tray
Retirer/ remplacer le Plateau de graisse
Retire/ reemplaza la Engrase la bandeja

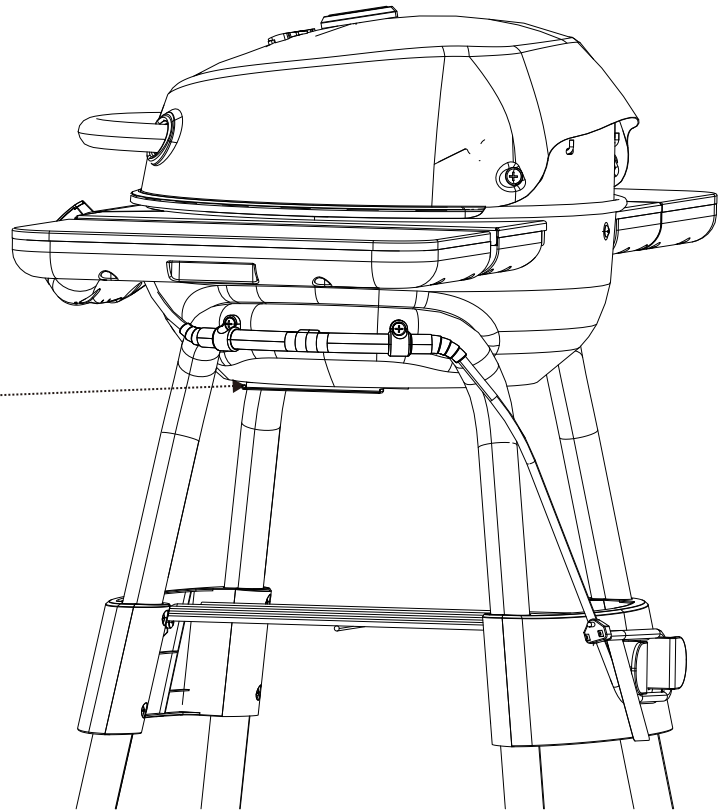
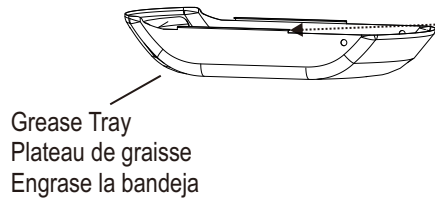


FIGURE 4/ IMAGE 4/ FIGURA 4

Remove/ Replace Controller Cover
Retirer/ remplacer le Couvercle de commande
Retire/ reemplaza la Cubierta para controlador

Controller Cover
Couvercle de commande
Cubierta para controlador

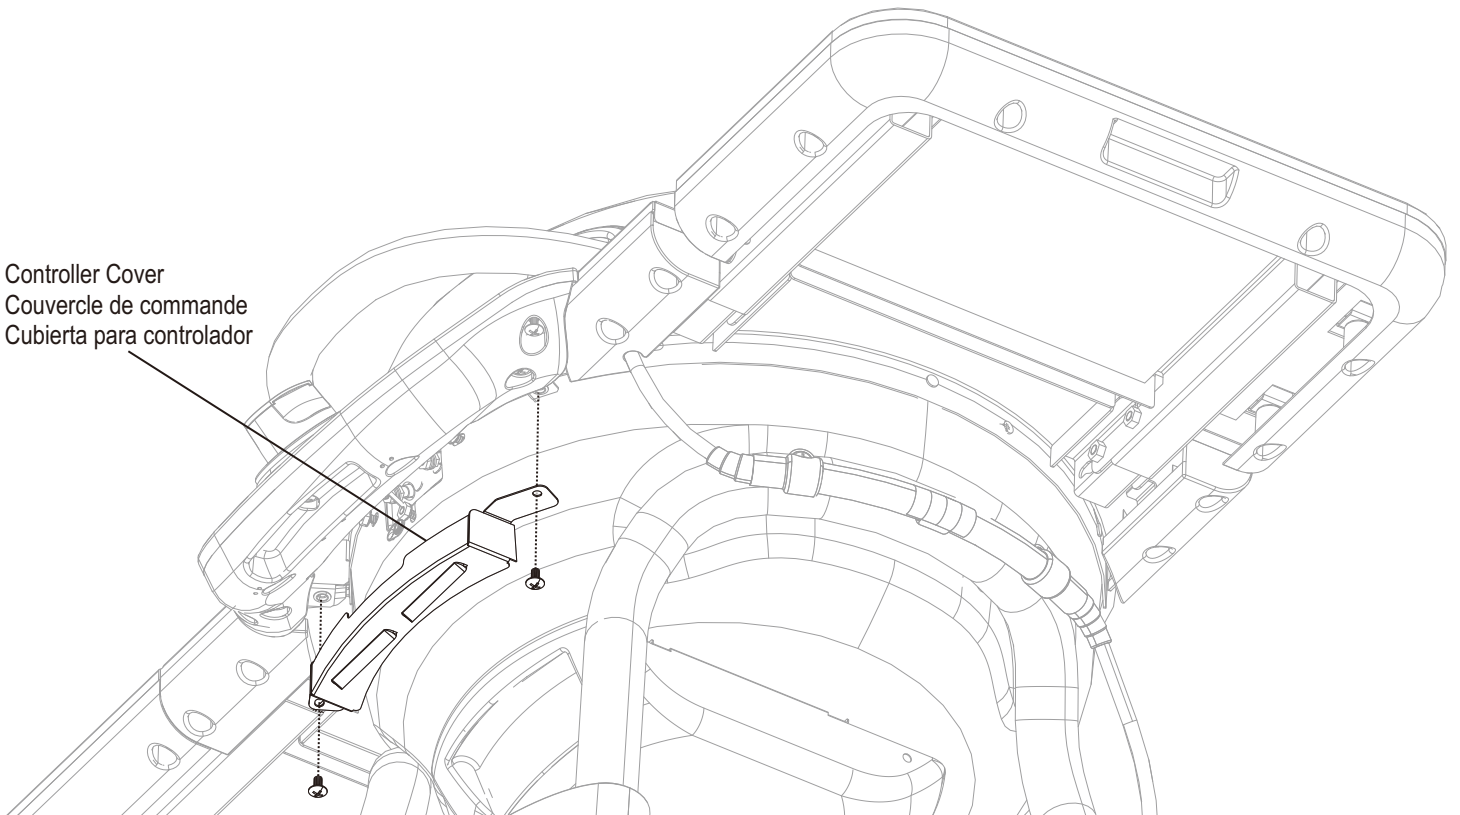


FIGURE 5/ IMAGE 5/ FIGURA 5

Remove/ Replace Bottom Skirt, F/ Control Panel
Retirer/ remplacer le Jupe inférieure du tableau de commande
Retire/ reemplaza la Borde inferior, para el panel de control

Bottom Skirt, F/ Control Panel
Jupe inférieure du tableau de commande
Borde inferior, para el panel de control


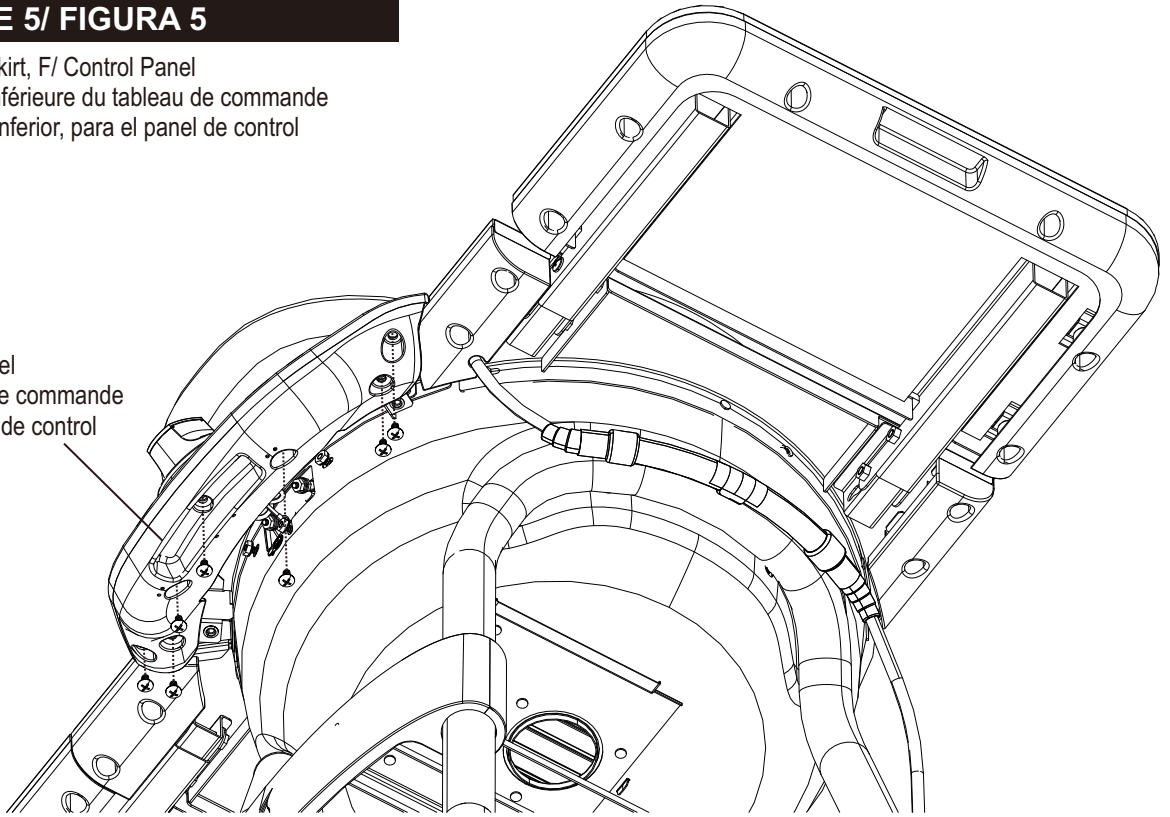


FIGURE 6/ IMAGE 6/ FIGURA 6

Remove/ Replace Controller
Retirer/ remplacer le Contrôleur
Retire/ reemplaza la Controlador

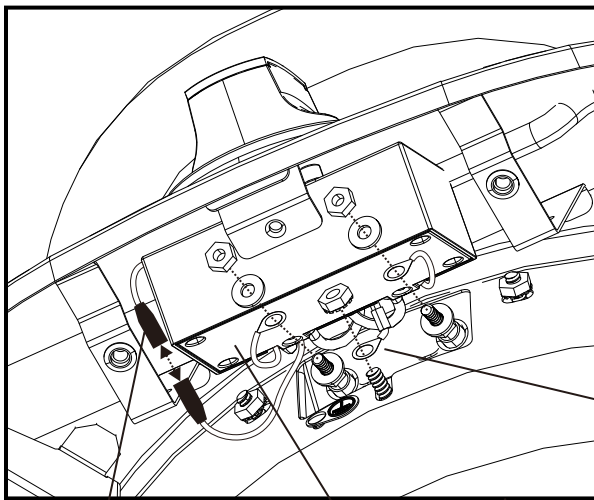

Ground Wire
Fil de terre
Cable a tierra

LED Light
Voyant DEL
Luz LED

Controller
Contrôleur
Controlador

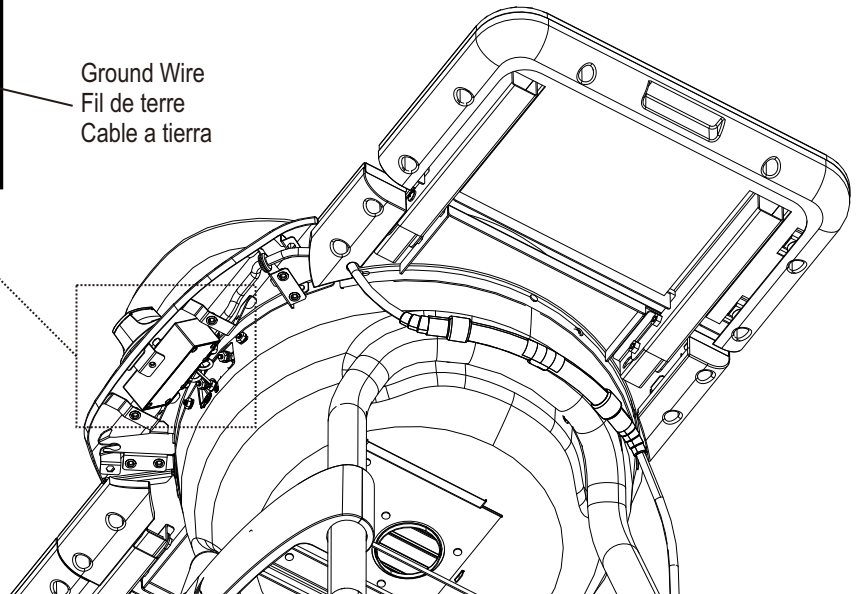


FIGURE 7/ IMAGE 7/ FIGURA 7

Remove/ Replace Control Knob
Retirer/ remplacer le Bouton de commande
Retire/ reemplaza la Control de mando

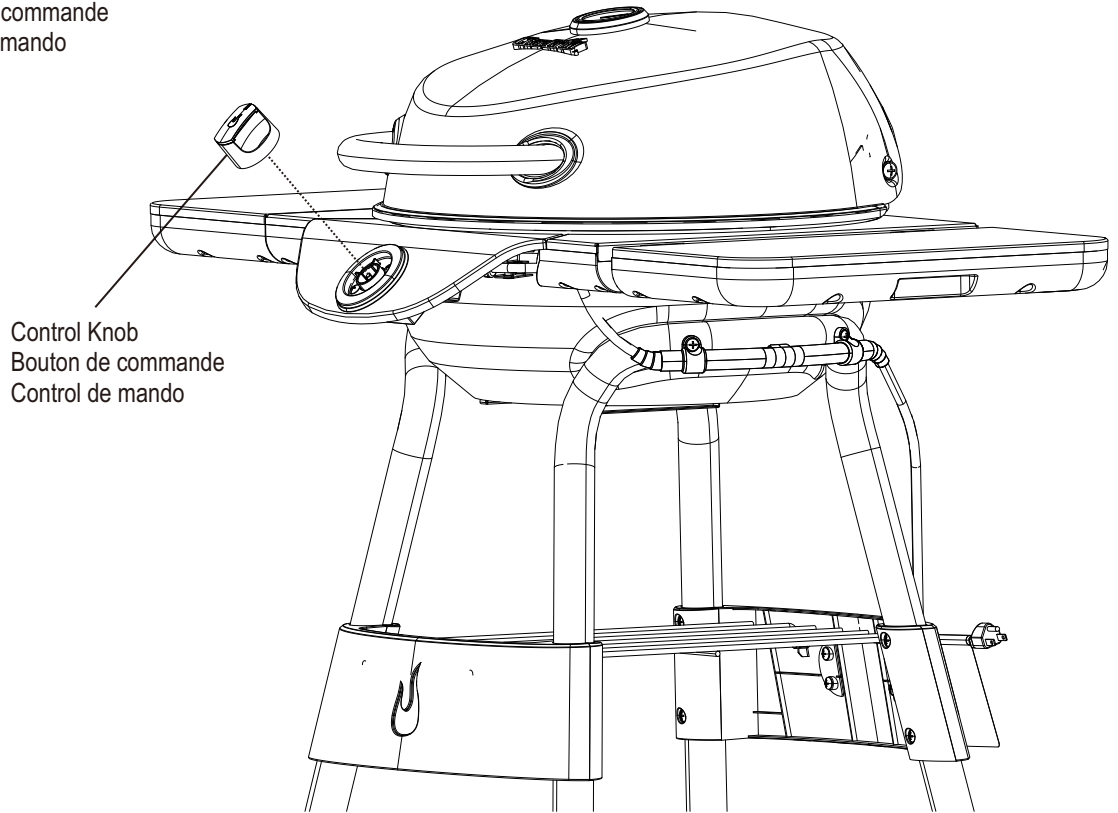


FIGURE 8/ IMAGE 8/ FIGURA 8

Remove/ Replace Bezel/ LED Light/ Controller
Retirer/ remplacer le Colerette/ Voyant DEL/ Contrôleur
Retire/ reemplaza la Luneta/ Luz LED/ Controlador

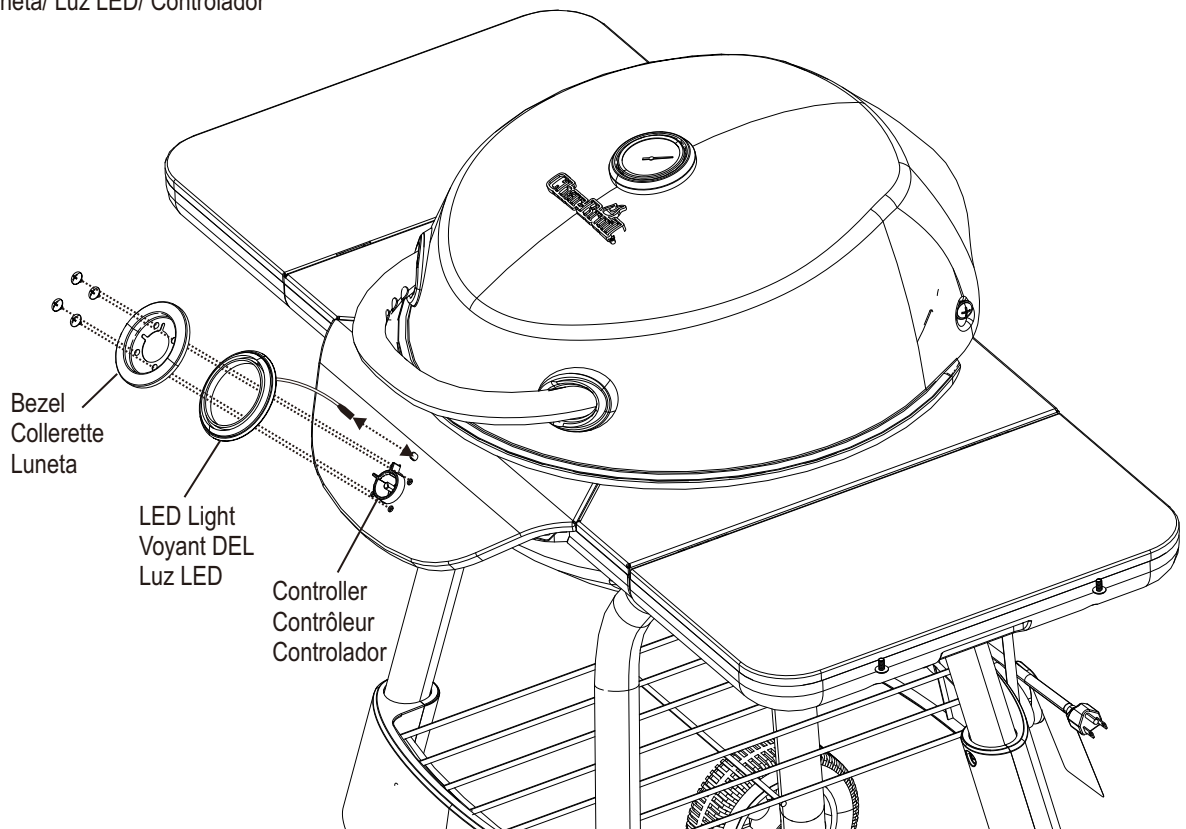


FIGURE 9/ IMAGE 9/ FIGURA 9

Remove/ Replace Controller
Retirer/ remplacer le Contrôleur
Retire/ reemplaza la Controlador

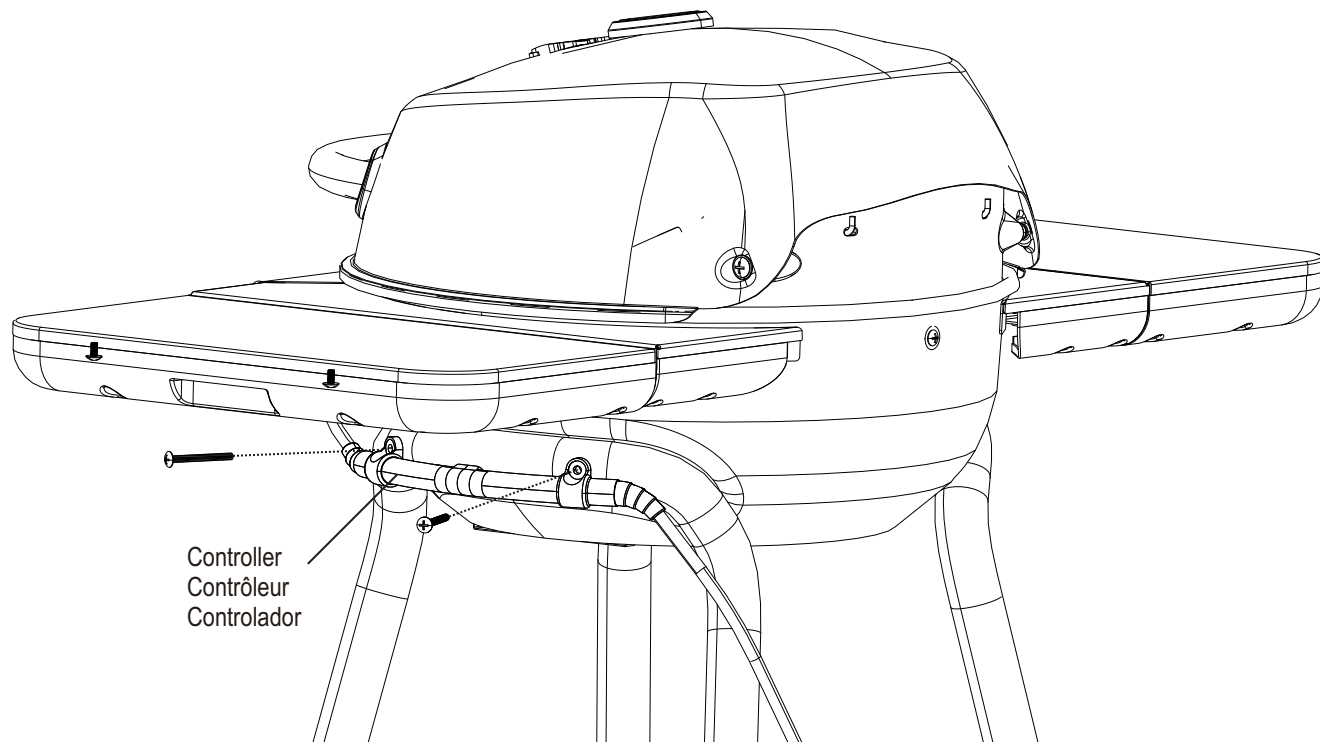


FIGURE 10A/ IMAGE 10A/ FIGURA 10A

Remove/ Replace Controller
Retirer/ remplacer le Contrôleur
Retire/ reemplaza la Controlador


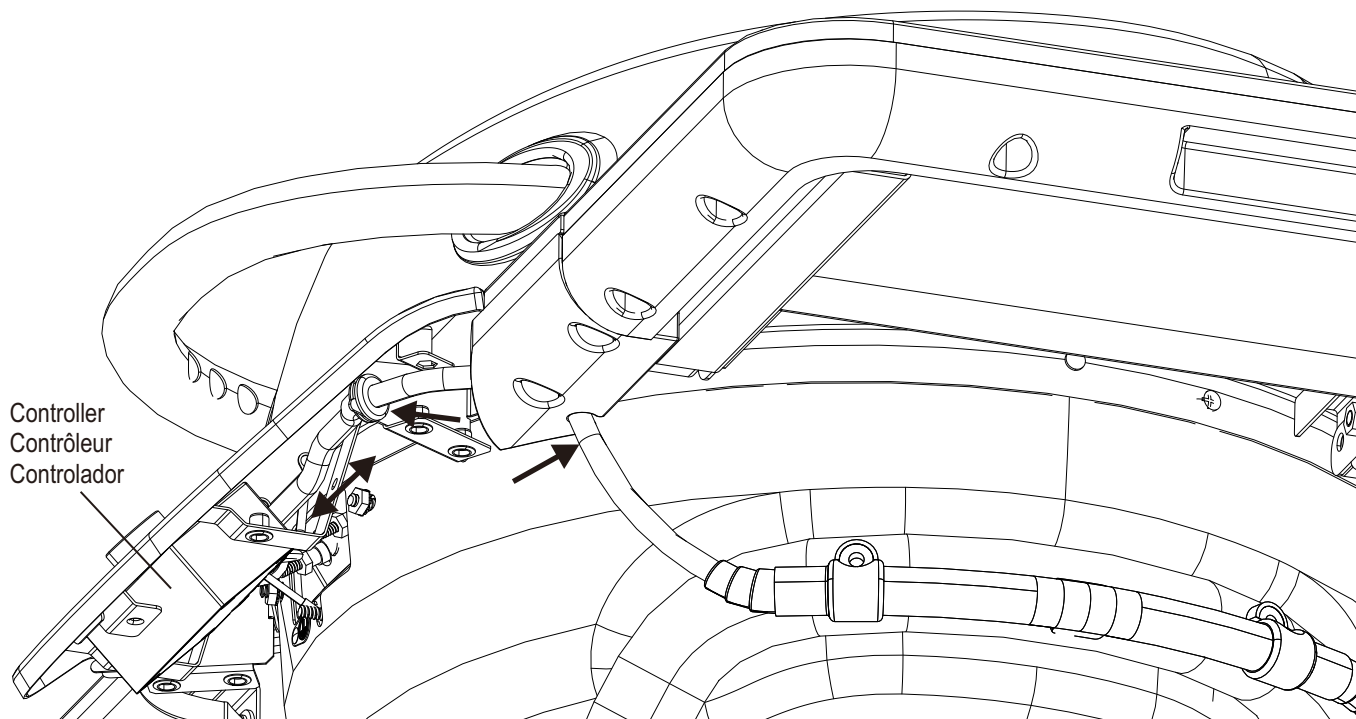


FIGURE 10B/ IMAGE 10B/ FIGURA 10B

Remove/ Replace Controller
Retirer/ remplacer le Contrôleur
Retire/ reemplaza la Controlador

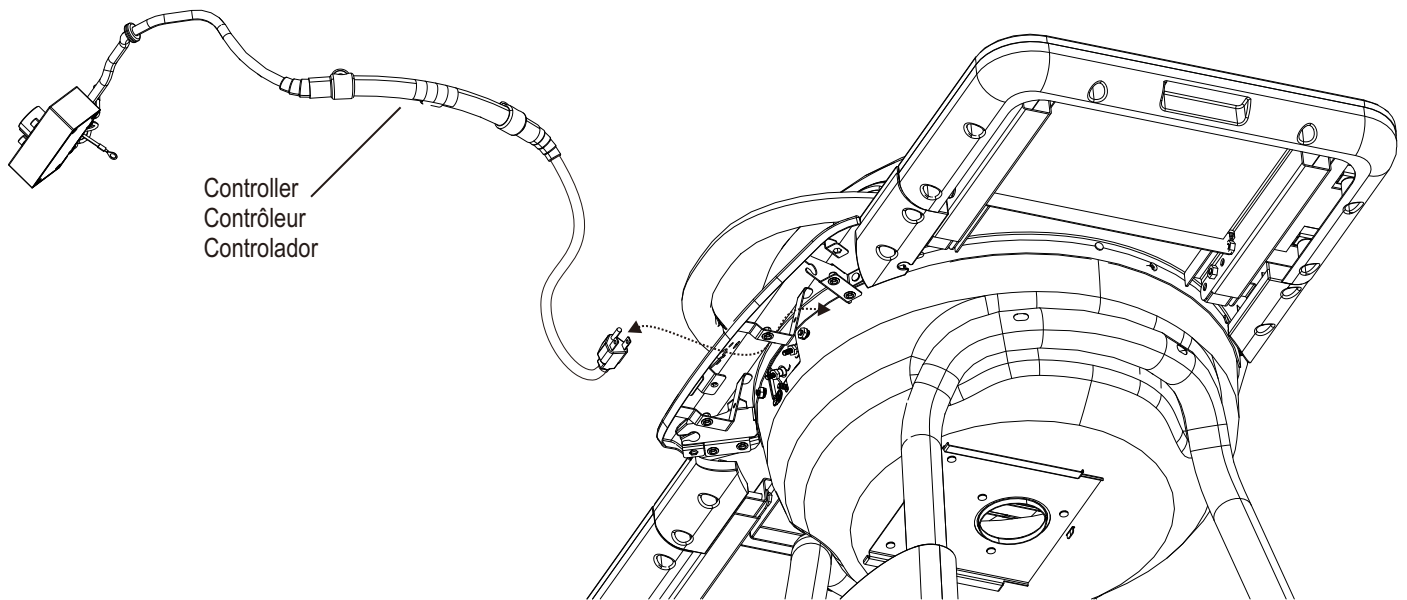

HEATING ELEMENT ACCESS/ REPLACEMENT ACCÈS À/REEMPLACEMENT DE L'ÉLÉMENT DE CHAUFFAGE ACCEDER/REEMPLAZAR ELEMENTO CALEFACTOR

FIGURE 11/ IMAGE 11/ FIGURA 11

Remove/ Replace Top Lid
Retirer/ remplacer le Couvercle supérieur
Retire/ reemplaza la Tapa superior

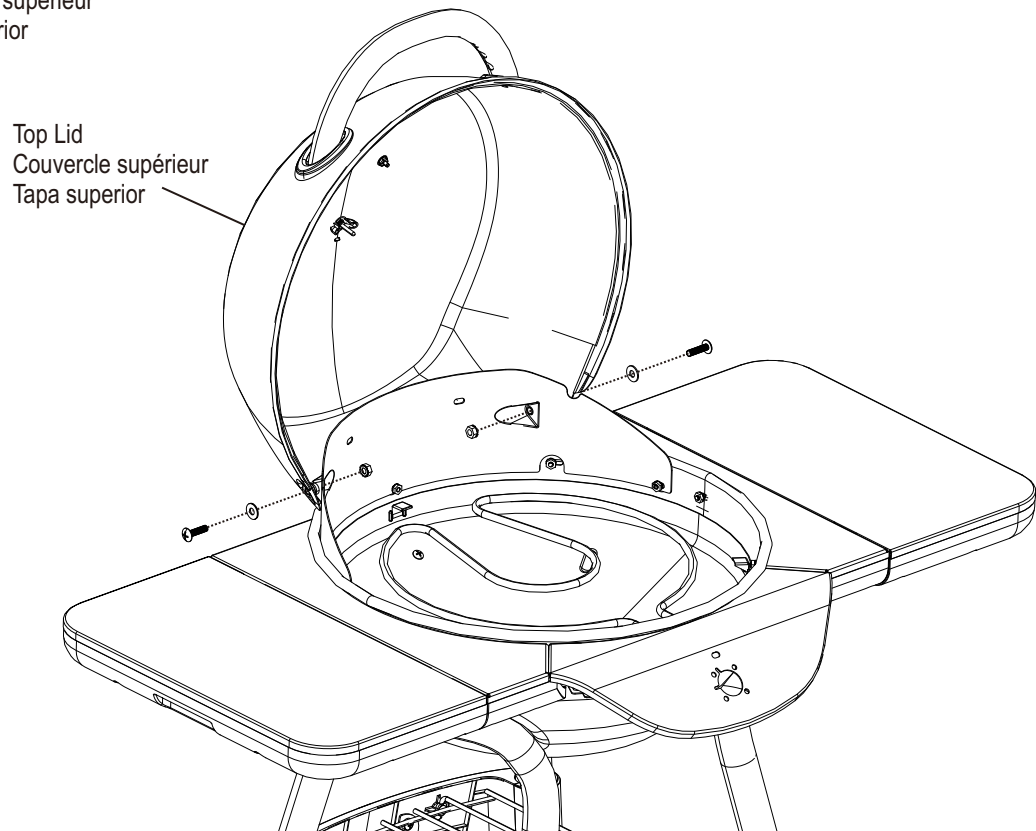


FIGURE 12/ IMAGE 12/ FIGURA 12

Remove/ Replace Heat Element
Retirer/ remplacer le Élément chauffant
Retire/ reemplaza la Elemento calefactor

Heat Element
Élément chauffant
Elemento calefactor

